

**Schurter**

## CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S

Tau Wae:	CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S
Kaihanga / Waitohu:	Schurter
Whakaahuatanga hua	SWITCH PUSHBUTTON SPST 100MA 42V
Ngā Rauemi:	CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S.pdf
RoHs Tūnga	Whakahaerehia te kore utu / RoHS
Waehe Stock	4774 pcs stock
Tuhinga mai i	Hong Kong
Te Ara Tuhi	DHL/Fedex/TNT/UPS/EMS

**TONO MO TE WHAKAHUA**

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.

### Ngā whakaaturanga o CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S

TAU WAE	CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S
KAIHANGA	Schurter
WHAKAAHUATANGA	SWITCH PUSHBUTTON SPST 100MA 42V
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Whakahaerehia te kore utu / RoHS
HE RAHINGA KEI TE WĀTEA	4774 pcs
PEPA RARAUNGA	CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S.pdf
WHAKAAETANGA NGAOHIKO - DC	60V
WHAKAAETANGA NGAOHIKO - AC	42V
MOMO	Capacitive, Illuminated
KĀHUA WHAKAMUTUNGA	Wire Leads
WHAKAWHITI MAHINGA	Off-On
RAUPAPA	CPS
PIHANGA WHAKAPAE PAEPAE	Circular - 16.10mm Dia
PACKAGING	Bulk
TAE MAHI	-40°C ~ 60°C
MOMO TAE	Panel Mount, Front
TAUMATA WHAKAARO MOE (MSL)	1 (Unlimited)
TE MAHI MOMO	-
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Lead free / RoHS Compliant
TIAKI INGOA	IP67 - Dust Tight, Waterproof
WHAKAKAMAHI WHAKAKUKU (NOMINAL)	5 ~ 28 VDC
MOMO WHAKAMARAMA, TAE	LED, Magenta/Cyan
NGĀ ĀHUATANGA	Ceramic Actuator, 3 Symbol
TE ORANGA RAWA	-
WHAKAAHUATANGA TAIPITOPITO	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
WHAKATAURANGA ONAMATA	100mA (AC/DC)
TAE - KAIHOAHOA / KAPORO	Clear (White Filter/Diffuser)
TAKAHANGA	SPST
MOMO KAIHOKO	Round, Button, Flush

### Ngā tūtohu e hāngai ana

Schurter CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S	CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S Kaiwhiwhi	CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S Kaiwhakarato
CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S Utu	CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S Pikitia	CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S Whakaahua
CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S PDF Datasheet	CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S Download Datasheet	Tuhinga CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S
CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S Stock	Hokona CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S	Hokona Schurter CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S
Schurter CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S	Schurter Kaiwhakarato	Schurter Kaiwhiwhi
Schurter CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S	Schurter Inc. CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1030-S	

### Ngā Hua e hāngai ana

<p><b>CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1024-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 5108 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>	<p><b>CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1026-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 4171 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>
<p><b>CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1025-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 5637 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>	<p><b>CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1033-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 5212 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>
<p><b>CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1036-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 3309 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>	<p><b>CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1031-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 3699 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>
<p><b>CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1027-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 3704 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>	<p><b>CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1035-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 5514 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>
<p><b>CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1032-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 5946 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>	<p><b>CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1029-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 4033 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>
<p><b>CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1034-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 4248 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>	<p><b>CPS16-LA00A10-SNCCWTNF-AI0MCMVAR-W1028-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 2973 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;"><b>RFQ</b></p>