

Schurter

CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S

Tau Wae:	CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S
Kaihanga / Waitohu:	Schurter
Whakaahuatanga hua	SWITCH PUSHBUTTON SPST 100MA 42V
Ngā Rauemi:	CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S.pdf
RoHs Tūnga	Whakahaerehia te kore utu / RoHS
Waehe Stock	6129 pcs stock
Tuhinga mai i	Hong Kong
Te Ara Tuhi	DHL/Fedex/TNT/UPS/EMS

TONO MO TE WHAKAHUA

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.

Ngā whakaaturanga o CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S

TAU WAE	CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S
KAIHANGA	Schurter
WHAKAAHUATANGA	SWITCH PUSHBUTTON SPST 100MA 42V
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Whakahaerehia te kore utu / RoHS
HE RAHINGA KEI TE WĀTEA	6129 pcs
PEPA RARAUNGA	CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S.pdf
WHAKAAETANGA NGAOHIKO - DC	60V
WHAKAAETANGA NGAOHIKO - AC	42V
MOMO	Capacitive, Illuminated
KĀHUA WHAKAMUTUNGA	Wire Leads
WHAKAWHITI MAHINGA	Off-On
RAUPAPA	CPS
PIHANGA WHAKAPAE PAEPAE	Circular - 19.10mm Dia
PACKAGING	Bulk
TAE MAHI	-40°C ~ 60°C
MOMO TAE	Panel Mount, Front
TAUMATA WHAKAARO MOE (MSL)	1 (Unlimited)
TE MAHI MOMO	-
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Lead free / RoHS Compliant
TIAKI INGOA	IP67 - Dust Tight, Waterproof
WHAKAKAMAHI WHAKAKUKU (NOMINAL)	5 ~ 28 VDC
MOMO WHAKAMARAMA, TAE	LED, Cyan/Red
NGĀ ĀHUATANGA	Ceramic Actuator, Finger Guide, 0 Symbol
TE ORANGA RAWA	-
WHAKAAHUATANGA TAIPITOPITO	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
WHAKATAURANGA ONAMATA	100mA (AC/DC)
TAE - KAIHOAHOA / KAPORO	Clear (White Filter/Diffuser)
TAKAHANGA	SPST
MOMO KAIHOKO	Round, Button, Flush

Ngā tūtohu e hāngai ana

Schurter CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S	CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S Kaiwhiwhi	CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S Kaiwhakarato
CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S Utu	CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S Pikitia	CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S Whakaahua
CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S PDF Datasheet	CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S Download Datasheet	Tuhinga CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S
CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S Stock	Hokona CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S	Hokona Schurter CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S
Schurter CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S	Schurter Kaiwhakarato	Schurter Kaiwhiwhi
Schurter CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S	Schurter Inc. CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1027-S	

Ngā Hua e hāngai ana

<p>CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1031-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3187 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1022-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3308 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1024-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 6990 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1026-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 2956 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1021-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5668 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1033-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 6781 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1025-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3404 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1030-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4026 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1028-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5648 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1032-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4786 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1023-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5033 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0CRVAR-W1029-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5930 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>