

Schurter

CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S

Tau Wae:	CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S
Kaihanga / Waitohu:	Schurter
Whakaahuatanga hua	SWITCH PUSHBUTTON SPST 100MA 42V
Ngā Rauemi:	CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S.pdf
RoHS Tūnga	Whakahaerehia te kore utu / RoHS
Waehe Stock	3830 pcs stock
Tuhinga mai i	Hong Kong
Te Ara Tuhi	DHL/Fedex/TNT/UPS/EMS

TONO MO TE WHAKAHUA

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.

Ngā whakaaturanga o CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S

TAU WAE	CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S
KAIHANGA	Schurter
WHAKAAHUATANGA	SWITCH PUSHBUTTON SPST 100MA 42V
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Whakahaerehia te kore utu / RoHS
HE RAHINGA KEI TE WĀTEA	3830 pcs
PEPA RARAUNGA	CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S.pdf
WHAKAAETANGA NGAOHIKO - DC	60V
WHAKAAETANGA NGAOHIKO - AC	42V
MOMO	Capacitive, Illuminated
KĀHUA WHAKAMUTUNGA	Wire Leads
WHAKAWHITI MAHINGA	Off-On
RAUPAPA	CPS
PIHANGA WHAKAPAE PAEPAE	Circular - 22.10mm Dia
PACKAGING	Bulk
TAE MAHI	-40°C ~ 60°C
MOMO TAE	Panel Mount, Front
TAUMATA WHAKAARO MOE (MSL)	1 (Unlimited)
TE MAHI MOMO	-
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Lead free / RoHS Compliant
TIAKI INGOA	IP67 - Dust Tight, Waterproof
WHAKAKAMAHI WHAKAKUKU (NOMINAL)	5 ~ 28 VDC
MOMO WHAKAMARAMA, TAE	LED, Magenta/White
NGĀ ĀHUATANGA	Finger Guide, Add Symbol
TE ORANGA RAWA	-
WHAKAAHUATANGA TAIPITOPITO	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
WHAKATAURANGA ONAMATA	100mA (AC/DC)
TAE - KAIHOAHOA / KAPORO	Silver
TAKAHANGA	SPST
MOMO KAIHOKO	Round, Button, Flush

Ngā tūtohu e hāngai ana

Schurter CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S	CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S Kaihiwhi	CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S Kaiwhakarato
CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S Utu	CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S Pikitia	CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S Whakaahua
CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S PDF Datasheet	CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S Download Datasheet	Tuhinga CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S
CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S Stock	Hokona CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S	Hokona Schurter CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S
Schurter CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S	Schurter Kaiwhakarato	Schurter Kaihiwhi
Schurter CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S	Schurter Inc. CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1037-S	

Ngā Hua e hāngai ana

<div style="border: 1px solid #ccc; padding: 5px;"> <p>CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1031-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 2817 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px; font-weight: bold;">RFQ</p> </div>	<div style="border: 1px solid #ccc; padding: 5px;"> <p>CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1035-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3107 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px; font-weight: bold;">RFQ</p> </div>
<div style="border: 1px solid #ccc; padding: 5px;"> <p>CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1038-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3069 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px; font-weight: bold;">RFQ</p> </div>	<div style="border: 1px solid #ccc; padding: 5px;"> <p>CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1034-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4591 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px; font-weight: bold;">RFQ</p> </div>
<div style="border: 1px solid #ccc; padding: 5px;"> <p>CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1043-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 6522 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px; font-weight: bold;">RFQ</p> </div>	<div style="border: 1px solid #ccc; padding: 5px;"> <p>CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1042-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 6062 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px; font-weight: bold;">RFQ</p> </div>
<div style="border: 1px solid #ccc; padding: 5px;"> <p>CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1039-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 2876 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px; font-weight: bold;">RFQ</p> </div>	<div style="border: 1px solid #ccc; padding: 5px;"> <p>CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1032-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4808 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px; font-weight: bold;">RFQ</p> </div>
<div style="border: 1px solid #ccc; padding: 5px;"> <p>CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1041-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4730 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px; font-weight: bold;">RFQ</p> </div>	<div style="border: 1px solid #ccc; padding: 5px;"> <p>CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1036-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 7034 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px; font-weight: bold;">RFQ</p> </div>
<div style="border: 1px solid #ccc; padding: 5px;"> <p>CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1033-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5166 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px; font-weight: bold;">RFQ</p> </div>	<div style="border: 1px solid #ccc; padding: 5px;"> <p>CPS22-LA00A10-SNCSNCWF-RI0MWVAR-W1040-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3235 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px; font-weight: bold;">RFQ</p> </div>