

Schurter

CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S

Tau Wae:	CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S
Kaihanga / Waitohu:	Schurter
Whakaahuatanga hua	SWITCH PUSHBUTTON SPST 100MA 42V
Ngā Rauemi:	CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S.pdf
RoHs Tūnga	Whakahaerehia te kore utu / RoHS
Waehe Stock	3924 pcs stock
Tuhinga mai i	Hong Kong
Te Ara Tuhi	DHL/Fedex/TNT/UPS/EMS

TONO MO TE WHAKAHUA

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.

Ngā whakaaturanga o CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S

TAU WAE	CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S
KAIHANGA	Schurter
WHAKAAHUATANGA	SWITCH PUSHBUTTON SPST 100MA 42V
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Whakahaerehia te kore utu / RoHS
HE RAHINGA KEI TE WĀTEA	3924 pcs
PEPA RARAUNGA	CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S.pdf
WHAKAAETANGA NGAOHIKO - DC	60V
WHAKAAETANGA NGAOHIKO - AC	42V
MOMO	Capacitive, Illuminated
KĀHUA WHAKAMUTUNGA	Wire Leads
WHAKAWHITI MAHINGA	Off-On
RAUPAPA	CPS
PIHANGA WHAKAPAE PAEPAE	Circular - 16.10mm Dia
PACKAGING	Bulk
TAE MAHI	-40°C ~ 60°C
MOMO TAE	Panel Mount, Front
TAUMATA WHAKAARO MOE (MSL)	1 (Unlimited)
TE MAHI MOMO	-
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Lead free / RoHS Compliant
TIAKI INGOA	IP67 - Dust Tight, Waterproof
WHAKAKAMAHI WHAKAKUKU (NOMINAL)	5 ~ 28 VDC
MOMO WHAKAMARAMA, TAE	LED, Magenta/White
NGĀ ĀHUATANGA	Ceramic Actuator, Finger Guide, RESET Symbol
TE ORANGA RAWA	-
WHAKAAHUATANGA TAIPITOPITO	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
WHAKATAURANGA ONAMATA	100mA (AC/DC)
TAE - KAIHOAHOA / KAPORO	Clear (White Filter/Diffuser)
TAKAHANGA	SPST
MOMO KAIHOKO	Round, Button, Flush

Ngā tūtohu e hāngai ana

Schurter CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S	CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S Kaiwhiwhi	CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S Kaiwhakarato
CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S Utu	CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S Pikitia	CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S Whakaahua
CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S PDF Datasheet	CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S Download Datasheet	Tuhinga CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S
CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S Stock	Hokona CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S	Hokona Schurter CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S
Schurter CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S	Schurter Kaiwhakarato	Schurter Kaiwhiwhi
Schurter CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S	Schurter Inc. CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1073-S	

Ngā Hua e hāngai ana

<p>CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1072-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5010 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>	<p>CPS16-LA00A10-SNCCWTWF-AI0MYVAR-W1001-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5106 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>
<p>CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1071-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 6380 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>	<p>CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1070-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4566 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>
<p>CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1068-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5717 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>	<p>CPS16-LA00A10-SNCCWTWF-AI0MYVAR-W0000-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4055 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>
<p>CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1076-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 6480 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>	<p>CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1067-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3619 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>
<p>CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1069-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4073 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>	<p>CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1074-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 2866 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>
<p>CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1075-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5790 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>	<p>CPS16-LA00A10-SNCCWTWF-AI0MWVAR-W1077-S Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3672 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 2px;">RFQ</p>