

**Schurter**

## CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S

Tau Wae:	CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S
Kaihanga / Waitohu:	Schurter
Whakaahuatanga hua	SWITCH PUSHBUTTON SPST 100MA 42V
Ngā Rauemi:	CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S.pdf
RoHS Tūnga	Whakahaerehia te kore utu / RoHS
Waehe Stock	4727 pcs stock
Tuhinga mai i	Hong Kong
Te Ara Tuhi	DHL/Fedex/TNT/UPS/EMS

TONO MO TE WHAKAHUA

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.

### Ngā whakaaturanga o CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S

TAU WAE	CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S
KAIHANGA	Schurter
WHAKAAHUATANGA	SWITCH PUSHBUTTON SPST 100MA 42V
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Whakahaerehia te kore utu / RoHS
HE RAHINGA KEI TE WĀTEA	4727 pcs
PEPA RARAUNGA	CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S.pdf
WHAKAAETANGA NGAOHIKO - DC	60V
WHAKAAETANGA NGAOHIKO - AC	42V
MOMO	Capacitive, Illuminated
KĀHUA WHAKAMUTUNGA	Wire Leads
WHAKAWHITI MAHINGA	Off-On
RAUPAPA	CPS
PIHANGA WHAKAPAE PAEPAE	Circular - 19.10mm Dia
PACKAGING	Bulk
TAE MAHI	-40°C ~ 60°C
MOMO TAE	Panel Mount, Front
TAUMATA WHAKAARO MOE (MSL)	1 (Unlimited)
TE MAHI MOMO	-
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Lead free / RoHS Compliant
TIAKI INGOA	IP67 - Dust Tight, Waterproof
WHAKAKAMAHI WHAKAKUKU (NOMINAL)	5 ~ 28 VDC
MOMO WHAKAMARAMA, TAE	LED, Green/White
NGĀ ĀHUATANGA	Ceramic Actuator, 8 Symbol
TE ORANGA RAWA	-
WHAKAAHUATANGA TAIPITOPITO	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
WHAKATAURANGA ONAMATA	100mA (AC/DC)
TAE - KAIHOAHOA / KAPORO	Clear (White Filter/Diffuser)
TAKAHANGA	SPST
MOMO KAIHOKO	Round, Button, Flush

### Ngā tūtohu e hāngai ana

Schurter CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S	CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S Kaiwhiwhi	CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S Kaiwhakarato
CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S Utu	CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S Pikitia	CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S Whakaahua
CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S PDF Datasheet	CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S Download Datasheet	Tuhinga CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S
CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S Stock	Hokona CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S	Hokona Schurter CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S
Schurter CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S	Schurter Kaiwhakarato	Schurter Kaiwhiwhi
Schurter CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S	Schurter Inc. CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1035-S	

### Ngā Hua e hāngai ana

<p><b>CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1033-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 6553 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px 5px; font-weight: bold;">RFQ</p>	<p><b>CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1038-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 7009 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px 5px; font-weight: bold;">RFQ</p>
<p><b>CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1039-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 4907 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px 5px; font-weight: bold;">RFQ</p>	<p><b>CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1037-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 3599 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px 5px; font-weight: bold;">RFQ</p>
<p><b>CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1032-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 4282 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px 5px; font-weight: bold;">RFQ</p>	<p><b>CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1036-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 3947 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px 5px; font-weight: bold;">RFQ</p>
<p><b>CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1041-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 6770 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px 5px; font-weight: bold;">RFQ</p>	<p><b>CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1031-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 4914 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px 5px; font-weight: bold;">RFQ</p>
<p><b>CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1040-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 4277 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px 5px; font-weight: bold;">RFQ</p>	<p><b>CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1030-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 4418 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px 5px; font-weight: bold;">RFQ</p>
<p><b>CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1029-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 2938 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px 5px; font-weight: bold;">RFQ</p>	<p><b>CPS19-LA00A10-SNCCWTNF-AI0GWVAR-W1034-S</b>                  Kaihanga: Schurter                  Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V                  I roto i te taonga: 3598 pcs</p> <p style="text-align: center; background-color: #eee; padding: 2px 5px; font-weight: bold;">RFQ</p>