

Schurter

CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S

Tau Wae:	CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S
Kaihanga / Waitohu:	Schurter
Whakaahuatanga hua	SWITCH PUSHBUTTON SPST 100MA 42V
Ngā Rauemi:	CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S.pdf
RoHs Tūnga	Whakahaerehia te kore utu / RoHS
Waehe Stock	6513 pcs stock
Tuhinga mai i	Hong Kong
Te Ara Tuhi	DHL/Fedex/TNT/UPS/EMS

TONO MO TE WHAKAHUA

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.

Ngā whakaaturanga o CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S

TAU WAE	CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S
KAIHANGA	Schurter
WHAKAAHUATANGA	SWITCH PUSHBUTTON SPST 100MA 42V
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Whakahaerehia te kore utu / RoHS
HE RAHINGA KEI TE WĀTEA	6513 pcs
PEPA RARAUNGA	CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S.pdf
WHAKAAETANGA NGAOHIKO - DC	60V
WHAKAAETANGA NGAOHIKO - AC	42V
MOMO	Capacitive, Illuminated
KĀHUA WHAKAMUTUNGA	Wire Leads
WHAKAWHITI MAHINGA	Off-On
RAUPAPA	CPS
PIHANGA WHAKAPAE PAEPAE	Circular - 19.10mm Dia
PACKAGING	Bulk
TAE MAHI	-40°C ~ 60°C
MOMO TAE	Panel Mount, Front
TAUMATA WHAKAARO MOE (MSL)	1 (Unlimited)
TE MAHI MOMO	-
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Lead free / RoHS Compliant
TIAKI INGOA	IP67 - Dust Tight, Waterproof
WHAKAKAMAHI WHAKAKUKU (NOMINAL)	5 ~ 28 VDC
MOMO WHAKAMARAMA, TAE	LED, Blue/Green
NGĀ ĀHUATANGA	Ceramic Actuator, Finger Guide, ON/OFF Symbol
TE ORANGA RAWA	-
WHAKAAHUATANGA TAIPITOPITO	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
WHAKATAURANGA ONAMATA	100mA (AC/DC)
TAE - KAIHOAHOA / KAPORO	Clear (White Filter/Diffuser)
TAKAHANGA	SPST
MOMO KAIHOKO	Round, Button, Flush

Ngā tūtohu e hāngai ana

Schurter CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S	CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S Kaiwhiwhi	CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S Kaiwhakarato
CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S Utu	CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S Pikitia	CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S Whakaahua
CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S PDF Datasheet	CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S Download Datasheet	Tuhinga CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S
CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S Stock	Hokona CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S	Hokona Schurter CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S
Schurter CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S	Schurter Kaiwhakarato	Schurter Kaiwhiwhi
Schurter CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S	Schurter Inc. CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1071-S	

Ngā Hua e hāngai ana

<p>CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1068-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5572 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1070-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 6537 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1069-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 7057 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1066-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5471 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1073-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 2984 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1072-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5655 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1074-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5311 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1067-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 2999 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1065-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3168 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1075-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 6346 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1076-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4924 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0BGVAR-W1077-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 6458 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>