

**Schurter**

## CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S

Tau Wae:	CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S
Kaihanga / Waitohu:	Schurter
Whakaahuatanga hua	SWITCH PUSHBUTTON SPST 100MA 42V
Ngā Rauemi:	CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S.pdf
RoHs Tūnga	Whakahaerehia te kore utu / RoHS
Waehe Stock	5823 pcs stock
Tuhinga mai i	Hong Kong
Te Ara Tuhi	DHL/Fedex/TNT/UPS/EMS

TONO MO TE WHAKAHUA

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.

### Ngā whakaaturanga o CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S

TAU WAE	CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S
KAIHANGA	Schurter
WHAKAAHUATANGA	SWITCH PUSHBUTTON SPST 100MA 42V
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Whakahaerehia te kore utu / RoHS
HE RAHINGA KEI TE WĀTEA	5823 pcs
PEPA RARAUNGA	CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S.pdf
WHAKAAETANGA NGAOHIKO - DC	60V
WHAKAAETANGA NGAOHIKO - AC	42V
MOMO	Capacitive, Illuminated
KĀHUA WHAKAMUTUNGA	Wire Leads
WHAKAWHITI MAHINGA	Off-On
RAUPAPA	CPS
PIHANGA WHAKAPAE PAEPAE	Circular - 19.10mm Dia
PACKAGING	Bulk
TAE MAHI	-40°C ~ 60°C
MOMO TAE	Panel Mount, Front
TAUMATA WHAKAARO MOE (MSL)	1 (Unlimited)
TE MAHI MOMO	-
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Lead free / RoHS Compliant
TIAKI INGOA	IP67 - Dust Tight, Waterproof
WHAKAKAMAHI WHAKAKUKU (NOMINAL)	5 ~ 28 VDC
MOMO WHAKAMARAMA, TAE	LED, Blue/Green
NGĀ ĀHUATANGA	Ceramic Actuator, Arrow Symbol
TE ORANGA RAWA	-
WHAKAAHUATANGA TAIPITOPITO	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
WHAKATAURANGA ONAMATA	100mA (AC/DC)
TAE - KAIHOAHOA / KAPORO	Clear (White Filter/Diffuser)
TAKAHANGA	SPST
MOMO KAIHOKO	Round, Button, Flush

### Ngā tūtohu e hāngai ana

Schurter CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S	CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S Kaiwhiwhi	CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S Kaiwhakarato
CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S Utu	CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S Pikitia	CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S Whakaahua
CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S PDF Datasheet	CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S Download Datasheet	Tuhinga CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S
CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S Stock	Hokona CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S	Hokona Schurter CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S
Schurter CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S	Schurter Kaiwhakarato	Schurter Kaiwhiwhi
Schurter CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S	Schurter Inc. CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1045-S	

### Ngā Hua e hāngai ana

<p><b>CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1050-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4405 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p><b>CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1042-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3639 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p><b>CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1041-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 6469 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p><b>CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1046-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5484 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p><b>CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1040-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3838 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p><b>CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1043-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3917 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p><b>CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1039-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3574 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p><b>CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1049-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3313 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p><b>CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1048-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 6881 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p><b>CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1047-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4346 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p><b>CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1051-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4035 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p><b>CPS19-LA00A10-SNCCWTNF-AI0BGVAR-W1044-S</b></p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 2827 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>