

Schurter

CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S

Tau Wae:	CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S
Kaihanga / Waitohu:	Schurter
Whakaahuatanga hua	SWITCH PUSHBUTTON SPST 100MA 42V
Ngā Rauemi:	CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S.pdf
RoHs Tūnga	Whakahaerehia te kore utu / RoHS
Waehe Stock	4451 pcs stock
Tuhinga mai i	Hong Kong
Te Ara Tuhi	DHL/Fedex/TNT/UPS/EMS

TONO MO TE WHAKAHUA

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.

Ngā whakaaturanga o CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S

TAU WAE	CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S
KAIHANGA	Schurter
WHAKAAHUATANGA	SWITCH PUSHBUTTON SPST 100MA 42V
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Whakahaerehia te kore utu / RoHS
HE RAHINGA KEI TE WĀTEA	4451 pcs
PEPA RARAUNGA	CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S.pdf
WHAKAAETANGA NGAOHIKO - DC	60V
WHAKAAETANGA NGAOHIKO - AC	42V
MOMO	Capacitive, Illuminated
KĀHUA WHAKAMUTUNGA	Wire Leads
WHAKAWHITI MAHINGA	Off-On
RAUPAPA	CPS
PIHANGA WHAKAPAE PAEPAE	Circular - 19.10mm Dia
PACKAGING	Bulk
TAE MAHI	-40°C ~ 60°C
MOMO TAE	Panel Mount, Front
TAUMATA WHAKAARO MOE (MSL)	1 (Unlimited)
TE MAHI MOMO	-
WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA	Lead free / RoHS Compliant
TIAKI INGOA	IP67 - Dust Tight, Waterproof
WHAKAKAMAHI WHAKAKUKU (NOMINAL)	5 ~ 28 VDC
MOMO WHAKAMARAMA, TAE	LED, White/Blue
NGĀ ĀHUATANGA	Ceramic Actuator, Finger Guide, HIGH Symbol
TE ORANGA RAWA	-
WHAKAAHUATANGA TAIPITOPITO	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
WHAKATAURANGA ONAMATA	100mA (AC/DC)
TAE - KAIHOAHOA / KAPORO	Clear (White Filter/Diffuser)
TAKAHANGA	SPST
MOMO KAIHOKO	Round, Button, Flush

Ngā tūtohu e hāngai ana

Schurter CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S	CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S Kaiwhiwhi	CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S Kaiwhakarato
CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S Utu	CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S Pikitia	CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S Whakaahua
CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S PDF Datasheet	CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S Download Datasheet	Tuhinga CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S
CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S Stock	Hokona CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S	Hokona Schurter CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S
Schurter CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S	Schurter Kaiwhakarato	Schurter Kaiwhiwhi
Schurter CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S	Schurter Inc. CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1069-S	

Ngā Hua e hāngai ana

<p>CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1068-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3479 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1063-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3373 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1070-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 2970 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1064-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 6057 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1067-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3175 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1065-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4060 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1066-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 2845 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1074-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5295 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1071-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3487 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1072-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4249 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>
<p>CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1073-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5185 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>	<p>CPS19-LA00A10-SNCCWTWF-AI0WBVAR-W1075-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4669 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px; font-weight: bold;">RFQ</p>