

Schurter

CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S

| | |
|---------------------|--|
| Tau Wae: | CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S |
| Kaihanga / Waitohu: | Schurter |
| Whakaahuatanga hua | SWITCH PUSHBUTTON SPST 100MA 42V |
| Ngā Rauemi: | CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S.pdf |
| RoHS Tūnga | Whakahaerehia te kore utu / RoHS |
| Waehe Stock | 4354 pcs stock |
| Tuhinga mai i | Hong Kong |
| Te Ara Tuhi | DHL/Fedex/TNT/UPS/EMS |

TONO MO TE WHAKAHUA

Ko te whakaahua he tohu. Tirohia nga korero mo nga taipitopito hua.

Ngā whakaaturanga o CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S

| | |
|---|---|
| TAU WAE | CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S |
| KAIHANGA | Schurter |
| WHAKAAHUATANGA | SWITCH PUSHBUTTON SPST 100MA 42V |
| WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA | Whakahaerehia te kore utu / RoHS |
| HE RAHINGA KEI TE WĀTEA | 4354 pcs |
| PEPA RARAUNGA | CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S.pdf |
| WHAKAAETANGA NGAOHIKO - DC | 60V |
| WHAKAAETANGA NGAOHIKO - AC | 42V |
| MOMO | Capacitive, Illuminated |
| KĀHUA WHAKAMUTUNGA | Wire Leads |
| WHAKAWHITI MAHINGA | Off-On |
| RAUPAPA | CPS |
| PIHANGA WHAKAPAE PAEPAE | Circular - 19.10mm Dia |
| PACKAGING | Bulk |
| TAE MAHI | -40°C ~ 60°C |
| MOMO TAE | Panel Mount, Front |
| TAUMATA WHAKAARO MOE (MSL) | 1 (Unlimited) |
| TE MAHI MOMO | - |
| WHAKAHAERE TOKO WHAKAHAERE / ROHS TŪNGA | Lead free / RoHS Compliant |
| TIAKI INGOA | IP67 - Dust Tight, Waterproof |
| WHAKAKAMAHI WHAKAKUKU (NOMINAL) | 5 ~ 28 VDC |
| MOMO WHAKAMARAMA, TAE | LED, Yellow/White |
| NGĀ ĀHUATANGA | Ceramic Actuator, Finger Guide, AB Symbol |
| TE ORANGA RAWA | - |
| WHAKAAHUATANGA TAIPITOPITO | Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front |
| WHAKATAURANGA ONAMATA | 100mA (AC/DC) |
| TAE - KAIHOAHOA / KAPORO | Clear (White Filter/Diffuser) |
| TAKAHANGA | SPST |
| MOMO KAIHOKO | Round, Button, Flush |

Ngā tūtohu e hāngai ana

| | | |
|--|---|--|
| Schurter CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S | CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S Kaiwhiwhi | CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S Kaiwhakarato |
| CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S Utu | CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S Pikitia | CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S Whakaahua |
| CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S PDF Datasheet | CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S Download Datasheet | Tuhinga CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S |
| CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S Stock | Hokona CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S | Hokona Schurter CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S |
| Schurter CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S | Schurter Kaiwhakarato | Schurter Kaiwhiwhi |
| Schurter CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S | Schurter Inc. CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1064-S | |

Ngā Hua e hāngai ana

| | |
|--|--|
| <p>CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1067-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3235 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;">RFQ</p> | <p>CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1060-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 6634 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;">RFQ</p> |
| <p>CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1065-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4428 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;">RFQ</p> | <p>CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1061-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5132 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;">RFQ</p> |
| <p>CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1058-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3133 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;">RFQ</p> | <p>CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1059-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4312 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;">RFQ</p> |
| <p>CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1066-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 5744 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;">RFQ</p> | <p>CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1063-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4199 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;">RFQ</p> |
| <p>CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1070-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 6047 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;">RFQ</p> | <p>CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1069-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4608 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;">RFQ</p> |
| <p>CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1068-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 4449 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;">RFQ</p> | <p>CPS19-LA00A10-SNCCWTF-AIOYVVAR-W1062-S</p> <p>Kaihanga: Schurter Whakaahuatanga: SWITCH PUSHBUTTON SPST 100MA 42V I roto i te taonga: 3878 pcs</p> <p style="text-align: center; background-color: #ccc; padding: 5px;">RFQ</p> |